HIGHWAY BARS

Removal (Tubular)

1. Slide boot (A) off top mount.
2. Remove fasteners (B) (M15).

Installation

1. Align mount holes and loosely install all fasteners.
2. Tighten all fasteners.

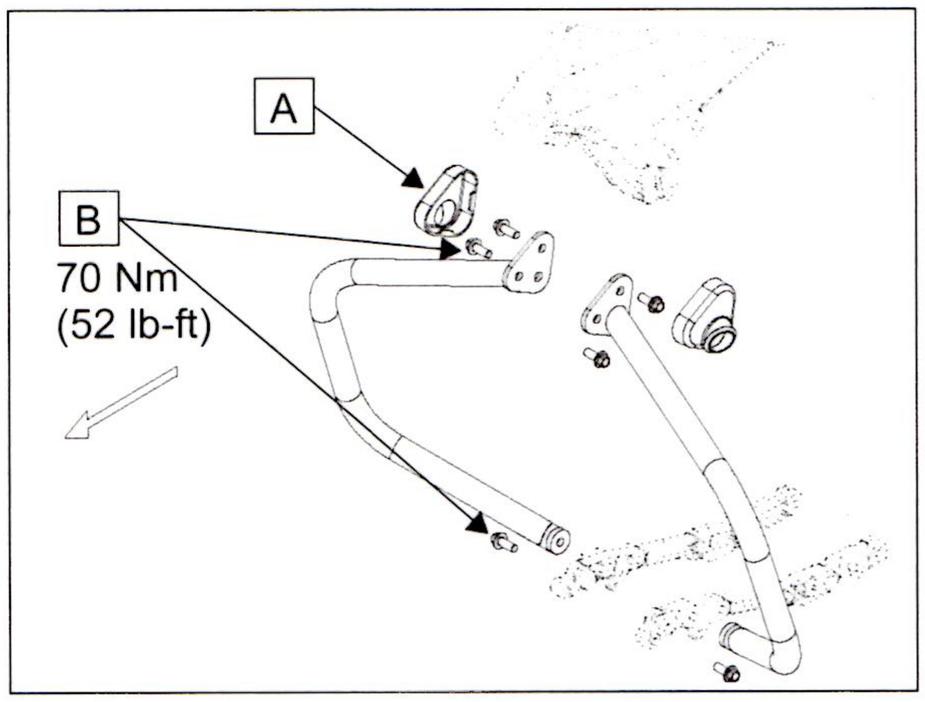

Removal (Forged)

1. Remove fasteners (C).
2. Remove fasteners (D).

Installation

1. Align mount holes and loosely install all fasteners.
2. Tighten all fasteners.

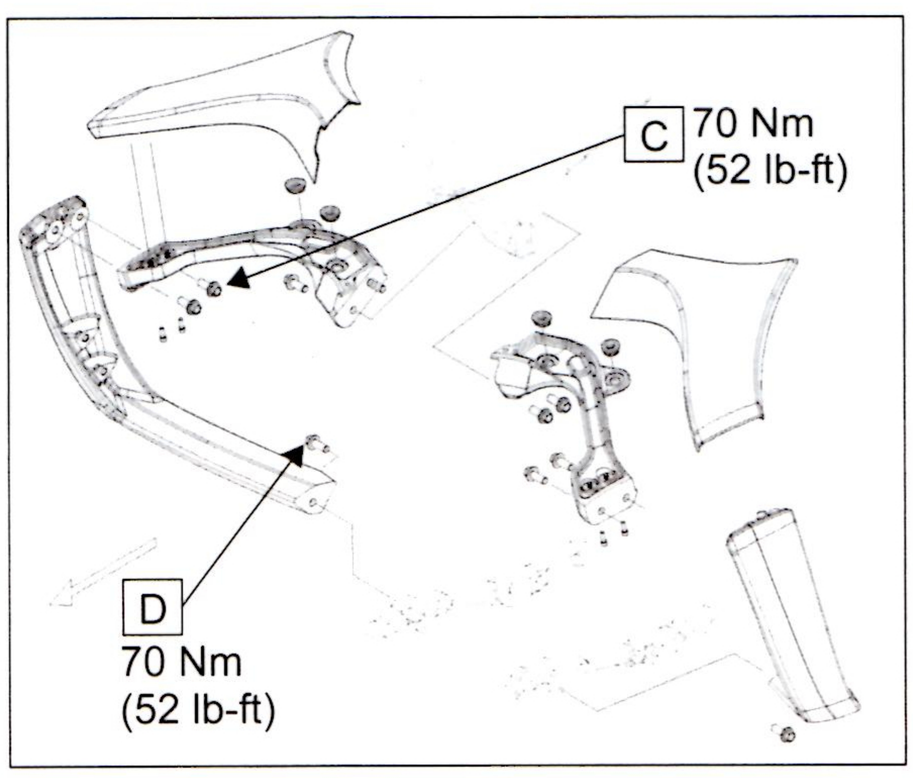

Removal - Top Cover (Forged)

1. Remove fasteners (E).
2. Lift cover to release pegs from grommets (F).

Installation

1. Lubricate grommets with soapy water.
2. Align pegs and push to seat in grommets.
3. Align mount holes and loosely install all fasteners.
4. Tighten all fasteners.

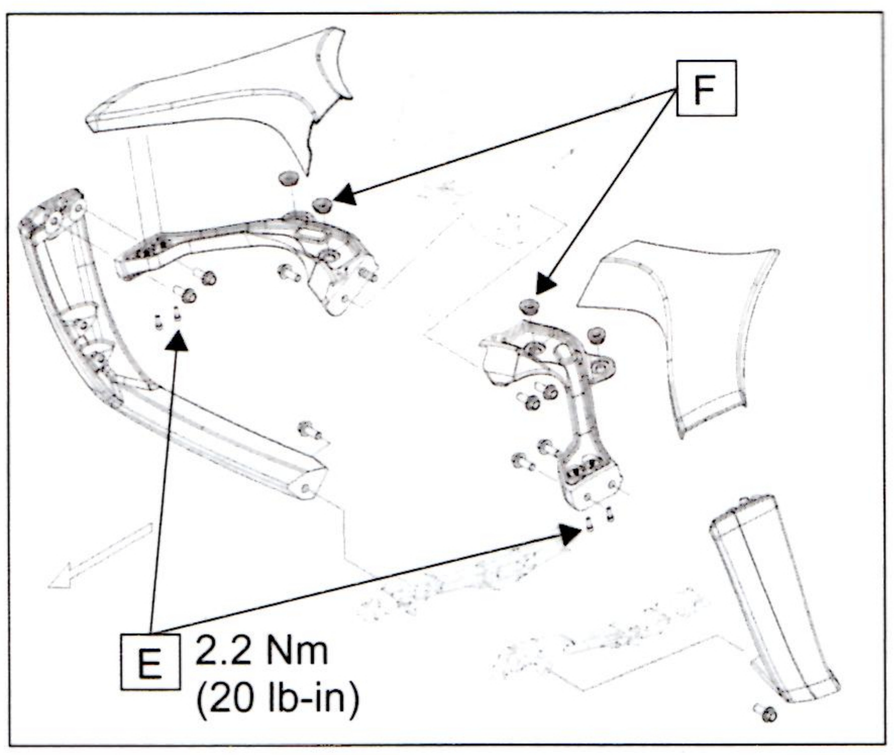

FRONT FAIRING - LOWER - (CROSS COUNTRY TOUR)

Removal

1. Remove screws (4 per side) securing outer fairing to inner fairing. 4MM ALLEN

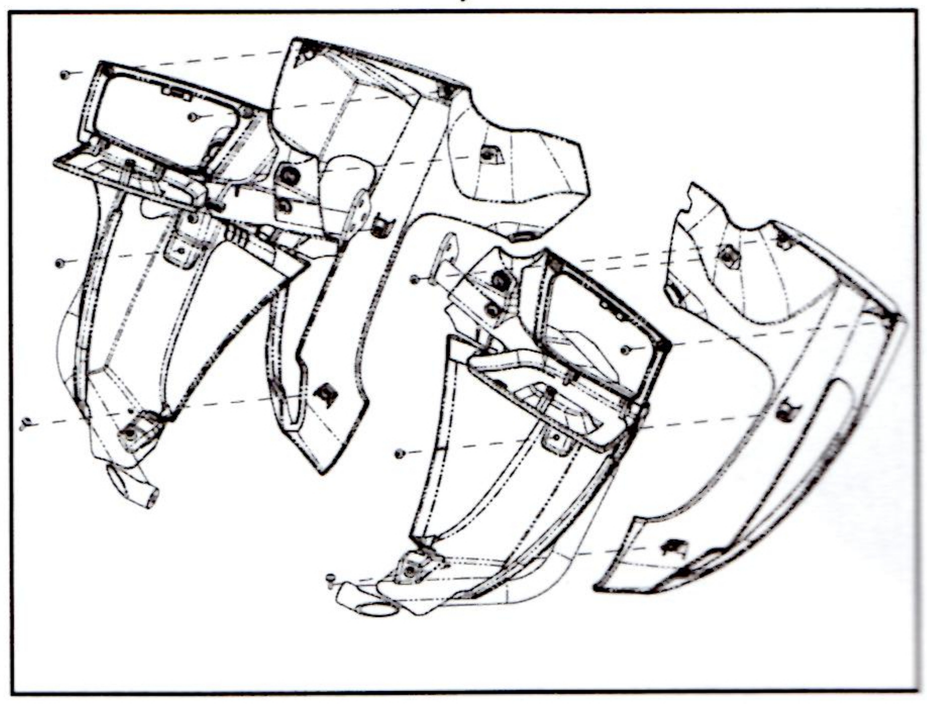

 © Copyright 2011 Polaris Sales Inc.

2. Disengage retainer from rubber grommet and remove outer fairing.

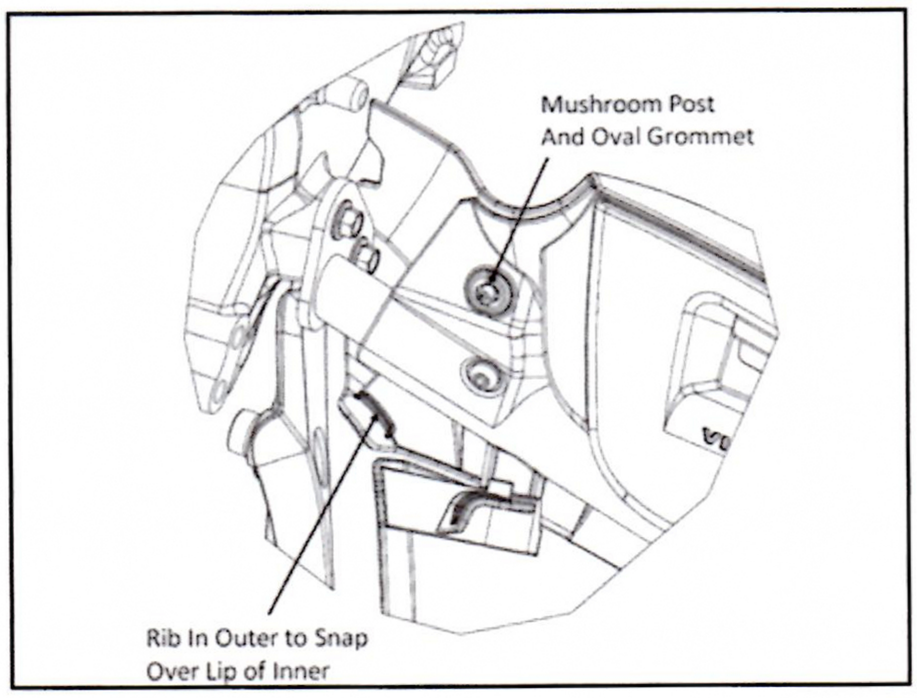

3. Remove screws and nuts (3 per side) securing inner fairing to mounting clamps. 6MM ALLEN, 10MM NUT

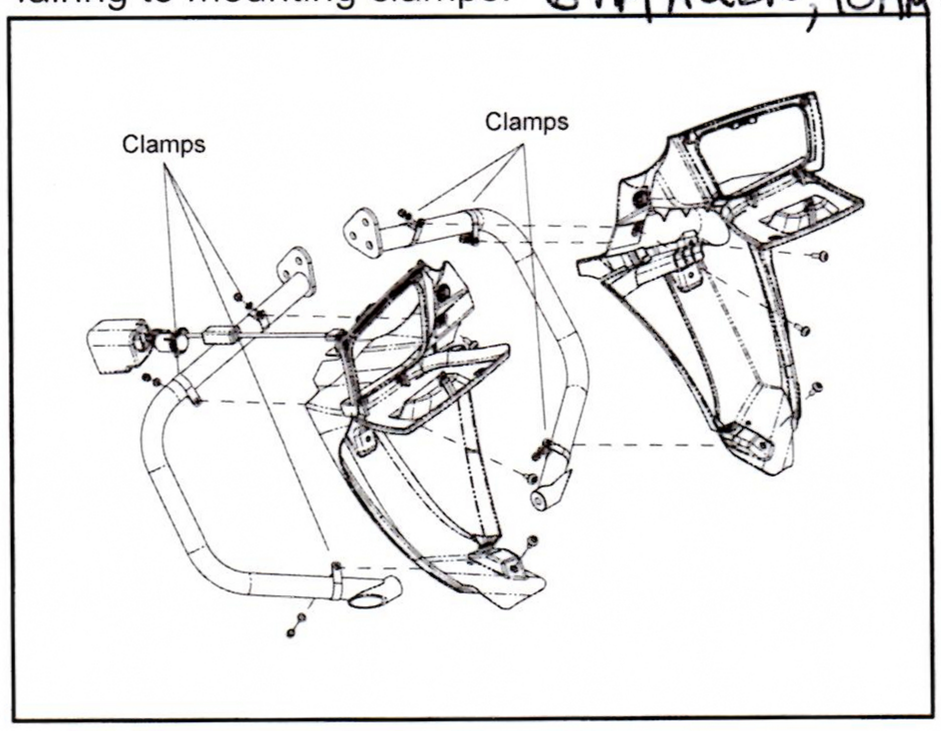

4. Disconnect ACC socket and iPod adapter multi-plug and remove lower fairing inners.

NOTE: Multi-plug is tucked beneath fuel tank. It is not necessary to remove fuel tank to access multi-plug.

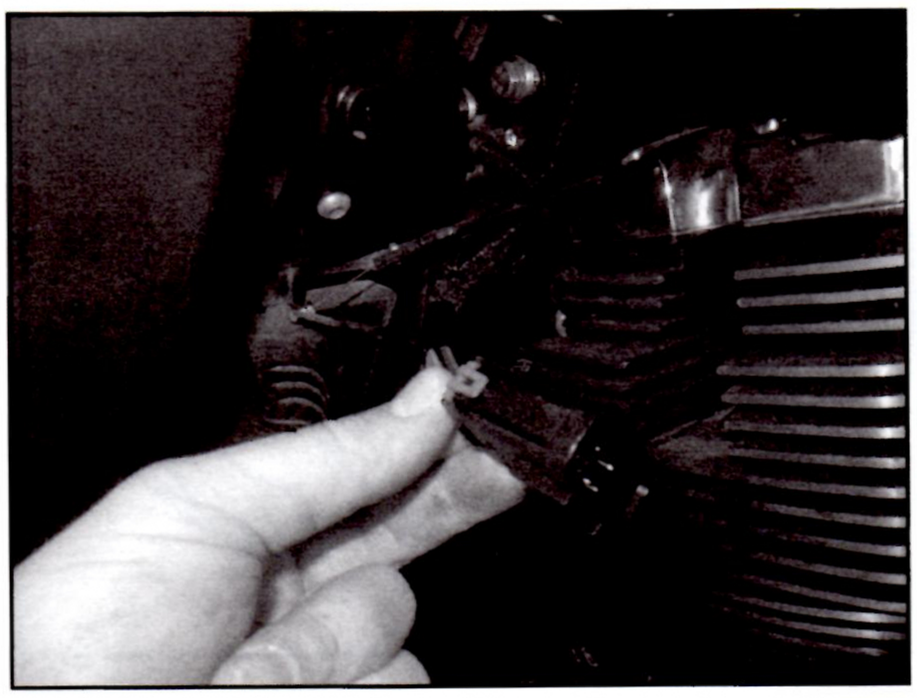

Installation

1. Position fairing clamps (3 per side) on highway bars as shown.

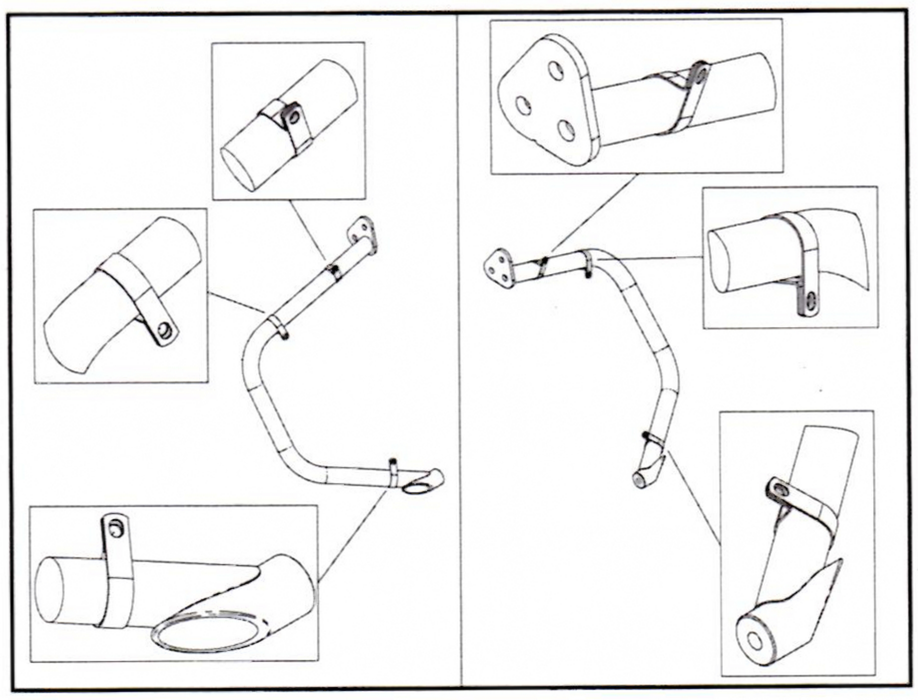

NOTE: The clamps can be pinched together with a pliers to help align holes.

2. After mounting clamps have been properly located on the highway bars, loosely mount fairing inners to clamps. Screws (3 per side) should be started from the fairing-side and nuts threaded on finger tight.

⚠ WARNING

Failure to locate the inner assembly far enough outboard on the bar could cause interference with the optional adjustable upper fairing wind deflectors. Prior to operating bike, verify that there is no interference with the adjustable wind deflectors or any other bike part by moving the handlebars from full left to full right position.

3. Once the fairing inners have been adjusted properly, torque screws and lock nuts to 32 in-lbs. (3.6 Nm).

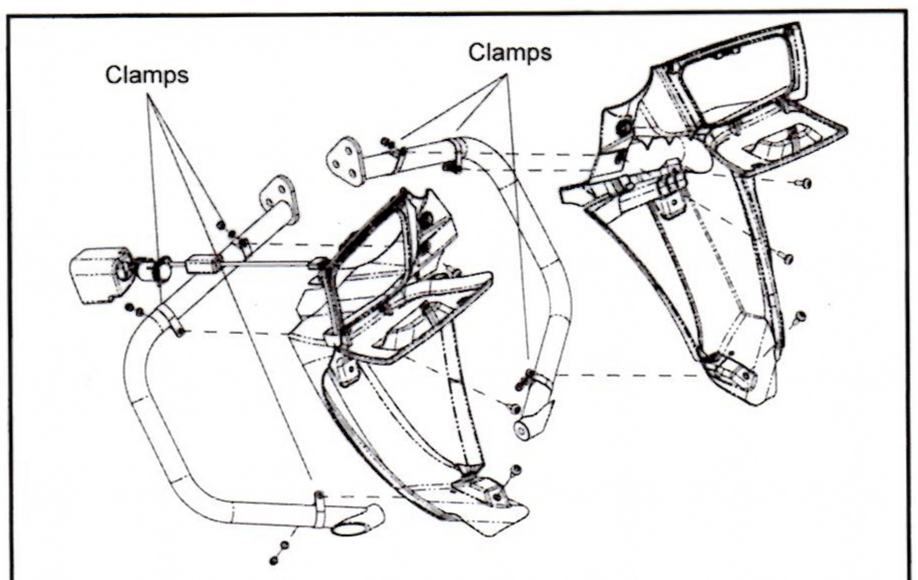

Torque Lower Fairing Fasteners (6) to:
32 in-lbs (3.6 Nm)

 © Copyright 2011 Polaris Sales Inc.

4. Reconnect ACC socket and iPod adaptor multiplug and reposition harness beneath fuel tank.

5. Move fairing outers into position and press retainers into rubber grommets.

6. Insert screws (4 per side) to secure inner fairing panel to outer fairing panel and torque screws to 32 in-lbs (3.6 Nm).

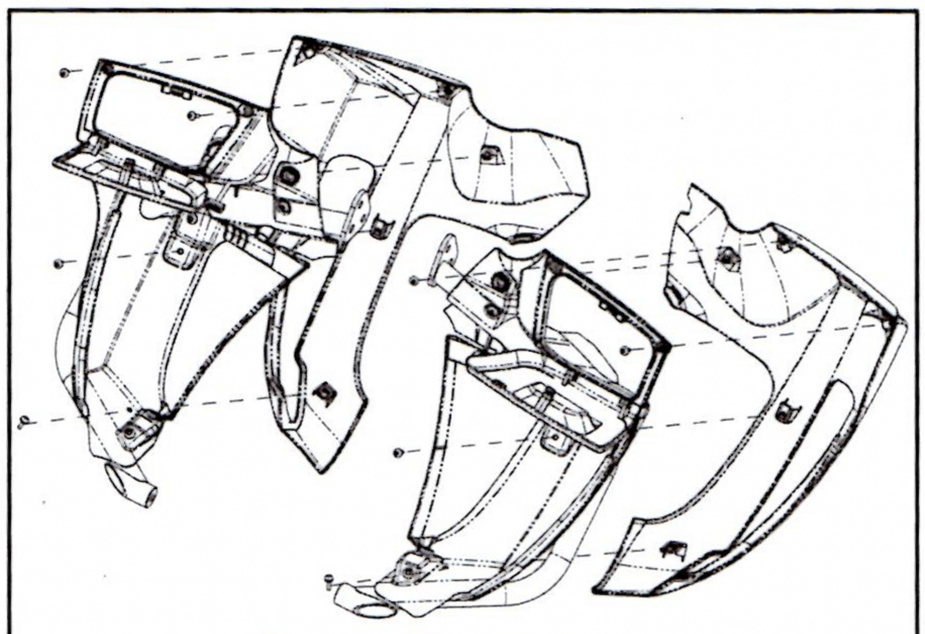

Torque to 32 in-lbs (3.6 Nm)

INSTRUMENT BEZEL (CROSS COUNTRY)

Bezel removal is not required for removal of dash panel or other fairing parts. To remove the bezel, first remove the dash panel.

Removal

1. Remove dash panel (page 3.15).

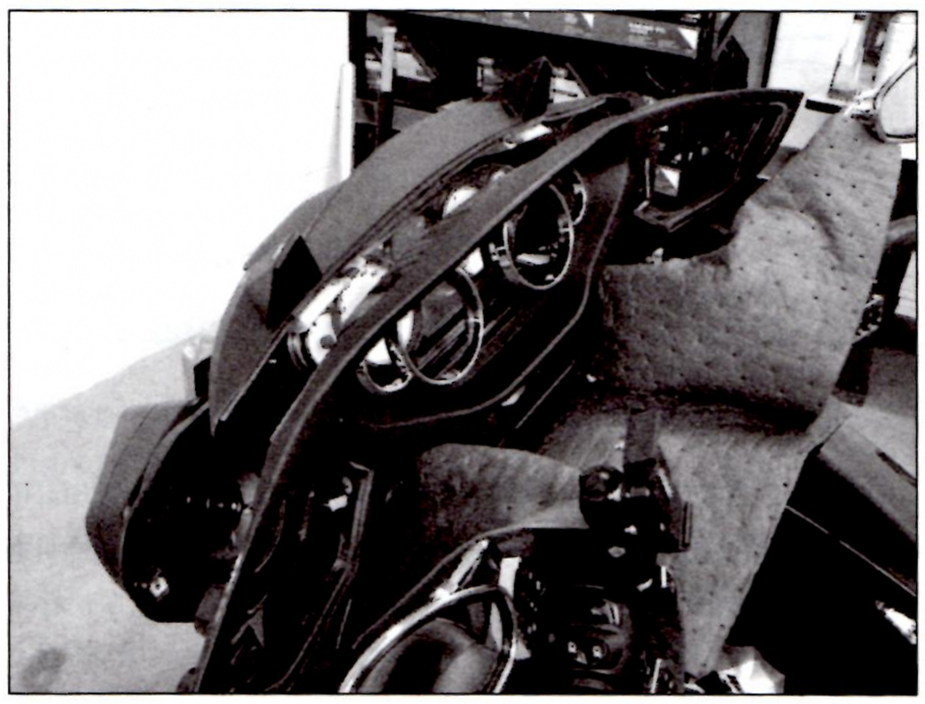

2. With dash panel removed, carefully pry inner tabs (A) and push bezel toward front side of dash until tabs are released.

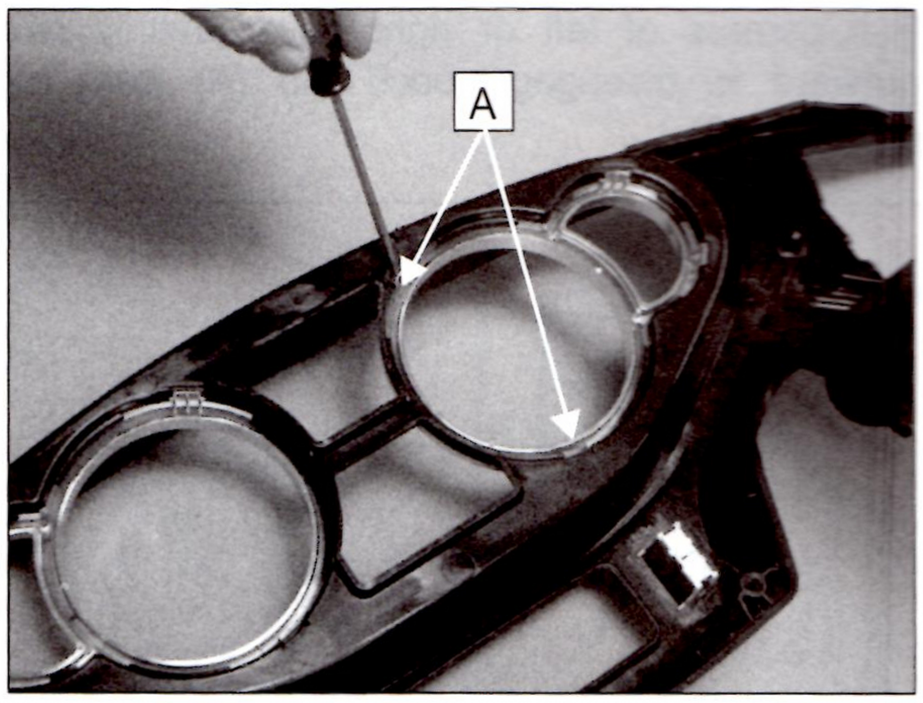

3. Carefully pry outer tabs (B) and push bezel toward front side of dash to remove.

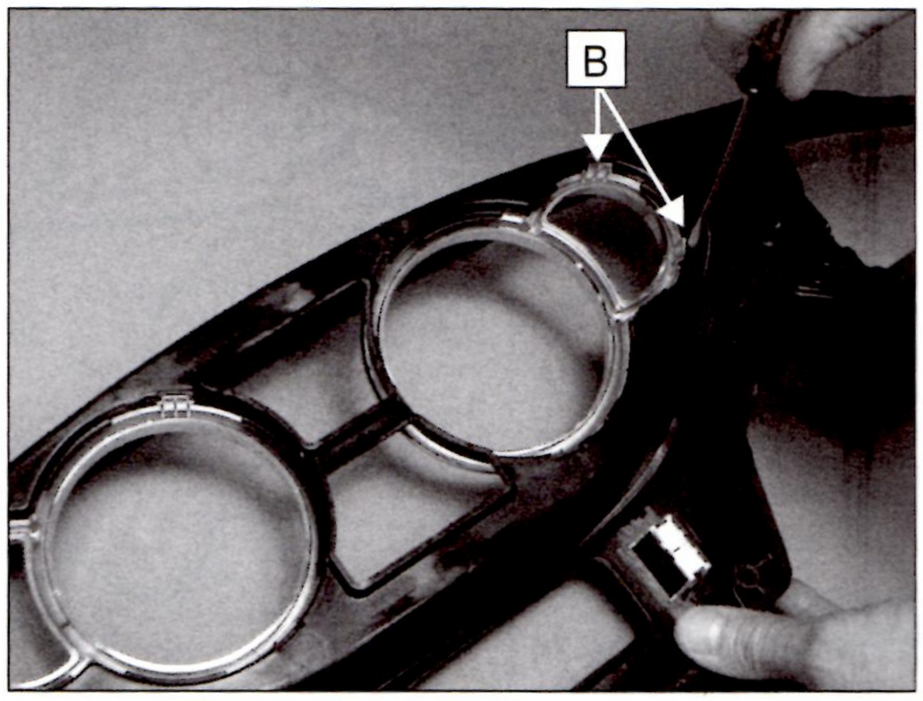

Installation

1. Reverse removal procedure to install bezel. Align bezel with opening in dash panel.

2. Place outer tabs into opening and hook tabs on inside edge of dash.

3. Press inner edge of bezel toward dash until it snaps into place and all tabs are engaged with the inside edge of dash panel.

4. Install dash panel.

 © Copyright 2011 Polaris Sales Inc.